

# Users Manual

## Vantage Trimmer Models 12E, 15E, 18E

- For use in trimming paper, photographs, and thin cardboard, etc.
- 12" (12E), 15" (15E), 18" (18E) trimming lengths
- Automatic clamping system provides comfortable and safe trimming
- Scale in cm and inches with a 1/2" grid for easy sizing of material

### Safety Instructions

- To avoid injuries, use the trimmer on a solid, level, and secure surface.
- Always secure the blade after use.
- Keep young children away from the trimmer.
- Do not touch the cutting blade with your fingers.

### Usage

- The upper blade is fixed into place during non-operation. To release the upper blade gently push to the right approximately 1/2" and lift up.
- Place the mat
- backstop to the correct position.
- Press the blade down slowly. The clamp will then automatically hold the material to be cut in place.
- After the cut
- to the right 1/2", dropping the blade down slightly and then pushing the handle slightly back to the left.

If you have any questions, please call a Customer Service Representative at (800) 543-5454.

# Vantage Trimmer

Thanks for purchasing a  
DAHLE Vantage® Trimmer.

*Be sure to read the User  
Manual before using your  
new Vantage® Trimmer.*



**DAHLE**